

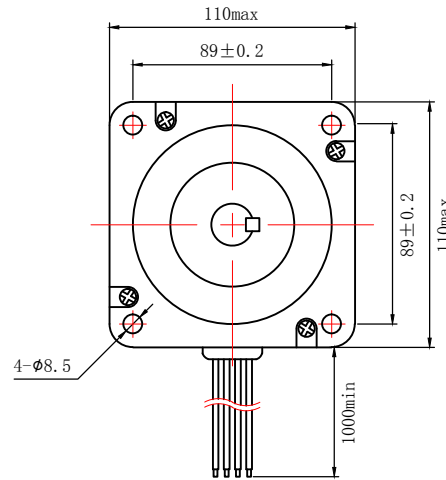


110H2P2168A4

电机尺寸
DIMENSIONS:
(UNIT=MM)

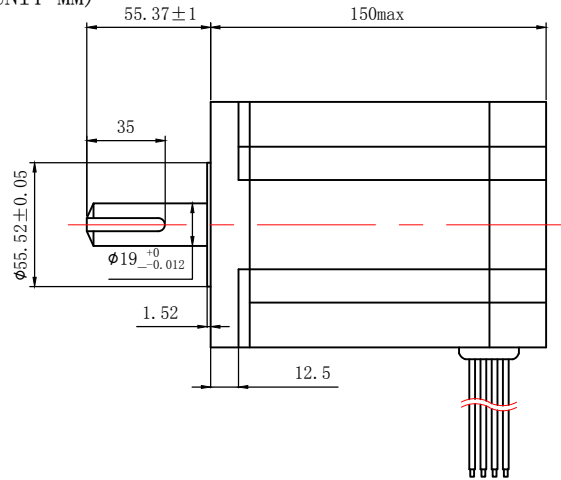


电机接线图
WIRING DIAGRAM:

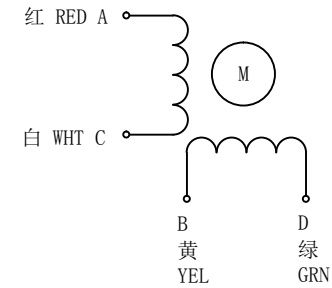

说明
NOTES:

- PLEASE DON'T HOLD MOTOR BY LEAD WIRES.
- PLEASE DON'T PLUG IN/OUT THE MOTOR CONNECTOR WHILE POWER ON.
- PLEASE DON'T DROP, HURL OR DUMP MOTOR AGAINST HARD MATERIAL
MALFUNCTION MAY NOT BE OBSERVED AT EARLY STAGE AFTER SUCH SHOCKS, BUT FOUND LATER. THE MISHANDLING VOIDS OUR WARRANTY.
- DONGGUAN ICAN-TECH WILL NOT BE RESPONSIBLE FOR ANY PATENT DISPUTE OR PROBLEM CAUSED BY ACTUAL APPLICATIONS

驱动连接方式
CONNECTION MODE:

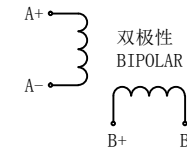

| 电机参数/ELECTRICAL PARAMETER | | 轴径配置/SHAFT DESIGNH |
|-----------------------------------|--------------|--------------------|
| 电机型号 MANUFACTURER MODEL | 110H2P2168A4 | |
| 适配步进电机驱动器 MATCHED MOTOR DRIVE | MC8H | |
| 步距角 STEP ANGLE (° /STEP) | 1.8 | |
| 电机电压 RATED VOLTAGE (V) | 4.68 | |
| 电机电流 RATED CURRENT (A/PHASE) | 6.8 | |
| 电机电阻 RESISTANCE (Ω±15%/PHASE) | 0.8 | |
| 电机电感 INDUCTANCE (mH±20%/PHASE) | 11 | |
| 电机力矩 HOLDING TORQUE (N.M) | 21 | |
| 电机绝缘等级 INSULATION CLASS | B | |

| 制图 DESIGNED | 检图 CHECKED | 校准 APPROVED | 日期 DATE | 比例 SCALE |
|------------------------------------|---------------|----------------------------------------------------|------------|-----------------------|
| HUANGTING | MAHUALING | | 2016/03/01 | 1:3.5 |
| 110H2P2168A4 | | 东莞市一能机电技术有限公司 DONGGUAN ICAN TECHNOLOGY CO., LTD | | |
| 两相步进电机 TWO-PHASE STEPPING MOTOR | | | | 版本 EDITION V2.0 |